



Installation and User Manual Freedom Won EMS Pro Installation Manual

Manufactured By Freedom Won (Pty) Ltd

Hereford Rd

Longmeadow Business Estate,

Modderfontein, Edenvale

1609

South Africa

www.freedomwon.co.za

Technical and Installation Assistance – Contact:

Please contact your Freedom Won Distributor or Reseller Installer for technical and installation support. A directory of Distributors and Reseller Installers is available at

www.freedomwon.co.za.

For advanced support please contact support@freedomwon.co.za.

Update Record:

| Revision Number | Update Summary | Updated By | Date of Issue |
|-----------------|---|------------------------------|---------------|
| 0 | First Release of the EMS Installation Manual | Mike Marquis Jarod Lesser | 23/01/2024 |
| 1 | Update to the WAN connectors | Jarod Lesser | 15/08/2024 |
| 2 | External port, Panel Dimensions, formatting numbering, spelling errors | Technical Training Team | 12/09/2024 |
| 3 | Included requirement to provide auxiliary power to the gen and load meters. | Technical Training Team | 22/10/2024 |

Table of Contents

| | |
|--|----|
| Table of Contents..... | 1 |
| 1. Introduction | 2 |
| 1.1 Purpose of the User Manual | 2 |
| 1.2 System Requirements | 2 |
| 1.3 Contents of the EMS Package | 2 |
| 2. Installation | 3 |
| 2.1 Prerequisites | 3 |
| 2.1.1 Basic EMS installation..... | 3 |
| 2.1.2 Controllers and Monitoring Requirements..... | 3 |
| 2.2 EMS Panel Dimensions..... | 5 |
| 2.3 Terminal Layouts | 5 |
| 2.3.1 Internal Terminals..... | 5 |
| 2.3.2 External Ports..... | 7 |
| 2.4 Installation Steps..... | 9 |
| 2.4.1 Site Inspection | 9 |
| 2.4.2 Mounting the EMS Panel..... | 9 |
| 2.4.3 Connecting Power to the EMS Panel | 10 |
| 2.4.4 Connecting Communication Cables | 12 |
| 2.4.5 Configuring 3 rd party controllers | 13 |
| 2.4.6 Connecting Internet to the EMS Panel..... | 14 |
| 2.4.7 Connecting the GSM Antenna | 14 |
| 2.4.8 Connecting the backup batteries..... | 15 |
| 3. Getting Started | 16 |
| 3.1 Power ON | 16 |
| 3.2 Lights on the EMS Panel..... | 16 |
| 3.3 Commissioning of Devices | 16 |
| 4. Troubleshooting..... | 17 |
| 4.1 Power switch not working. | 17 |
| 4.2 Error light staying illuminated. | 17 |
| 4.3 Not getting communication to a controller on the site..... | 17 |
| 5. Upgrades..... | 18 |
| 6. Maintenance..... | 18 |
| 6.1 Help and Support..... | 19 |

1. Introduction

1.1 Purpose of the User Manual

This manual is intended to assist trained technicians and installers in installing and commissioning a Freedom Won EMS (Energy Management System). It is not intended to teach the inner workings of a Freedom Won EMS; its function is to assist the installer in completing a successful installation and integration with other equipment.

The manual will not cover the technical details required for the integration of third-party equipment. Should this document not cover the required integration or technical details, please contact Freedom Won at support@freedomwon.co.za

1.2 System Requirements

The computer-based requirements for the system to be installed and function are as follows:

Compatible web browser: Microsoft Edge, Google Chrome, Firefox, Opera, Safari

Mobile devices will need an Android or MacOS.

To set up the software portion of the EMS system, you will have to have access to the internet, set up a valid account on the EMS Portal and have the relevant permissions on that account to add and configure the hardware installed on site.

1.3 Contents of the EMS Package

The following items are included with your EMS purchase:

TABLE 1: PACKAGED CONTENTS

| Item | Qty | Packaged | Received |
|---------------------------------------|-----|----------|----------|
| EMS Panel 650x400x200mm | 1 | | |
| Wall Mount Brackets | 4 | | |
| Temperature Joiner Box | 2 | | |
| PT100 Temperature Probe | 2 | | |
| External Power Connector | 1 | | |
| GSM Antenna, 3m cable, SMA | 1 | | |
| RS-485 Connector plugs | 4 | | |
| Freedom Won 12v/7.5Ah LiFePO4 Battery | 2 | | |
| Installation Manual | 1 | | |
| Termination Resistors | 10 | | |

2. Installation

2.1 Prerequisites

The correct tools and materials should be utilised to effectively install the EMS panel and achieve a reliable and consistent outcome.

These prerequisites will serve as a guide for the items required alongside the EMS offering to correctly install the system.

2.1.1 Basic EMS installation

The following list will assist in determining the right hardware to do a reliable installation.

1. EMS Panel
2. 6A Circuit Breaker
3. PG9 and PG11 Glands
4. 40x25mm Trunking
5. 1mm² flat Twin and Earth
6. 8mm Fischer plugs and screws or appropriate Rawl bolts
7. Belden Shielded twisted pair 0.22mm² or Belden Shielded twisted pair 0.5mm²
8. Cat5 With Shield or CAT6 LAN cable
9. RJ45 Connectors
10. RJ45 Cable Rubber
11. M12 4pin Connectors (120504-01-001)
12. Phone, Laptop or Tablet with the appropriate web browser
13. Stable Site internet connection

2.1.2 Controllers and Monitoring Requirements

The EMS panel can be connected to a wide variety of 3rd party supported hardware or controllers. These controllers must be wired with the appropriate supported communications. The EMS System supports **Modbus RS-485** and **Modbus TCP** connections and communication protocols to the EMS Panel itself. The Panel has several physical connection inputs on the side of the panel to plug in the various controllers.

This hardware includes connection to:

- Power Meter
- Power analysers
- Solar Grid Tie Inverters
- DC Coupled Solar Systems.
- Freedom Won BESS
- Generators

For a full list of the exact support hardware for the EMS system, please click [here](#).

For optimal function of your EMS system, install Electricity Meters or Power Analysers at each connection point through the power generation system. This will ensure consistent, reliable data is fed to the EMS, which then processes the data and provides the best control to the system possible.

The mains and generator power meters used on the EMS site must have auxiliary power provided by the hybrid inverter's output. If this cannot be done, another form of backup power must be provided to the power meters. This ensures that the power meters stay on when there is a loss of power or loadshedding.


As soon as multiple power providers are being summed into the same input it is advisable to put a power meter down at that summation point to give the most accurate readings possible.

The rule of thumb is that a measured value will always be more accurate than a calculated one. Use electricity meters or power analysers to provide this measurement rather than attempting to summate multiple power producers or consumers.

As an example, let's look at the singleline diagram below of a basic site with 2 generators and 2 grid tie solar systems. Take note of all the locations marked in blue as these would be sites where one would install additional power meters to get the most accurate and reliable data rather than adding up the data from each separate system.

It is vital that the appropriate cables are run between the various meters and the EMS panel, improper wire and communication wiring practices here will render the system unreliable and inconsistent.


Figure 1: Electricity meter layout

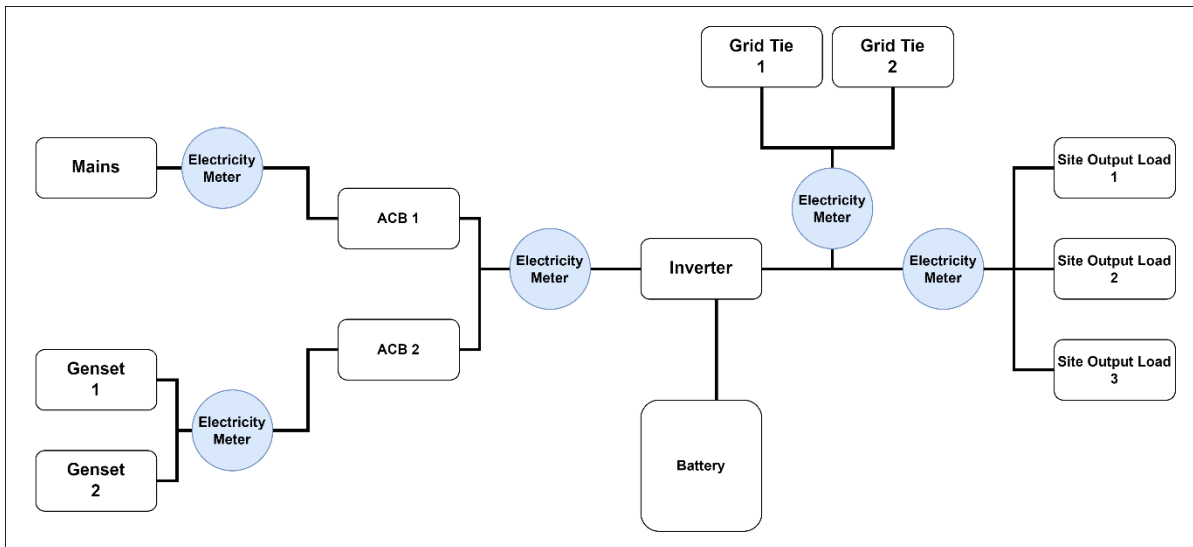

2.2 EMS Panel Dimensions

The following panel dimensions are subject to change based on the panel version as the panels are continuously being developed and improved.

Figure 2: Panel dimensions

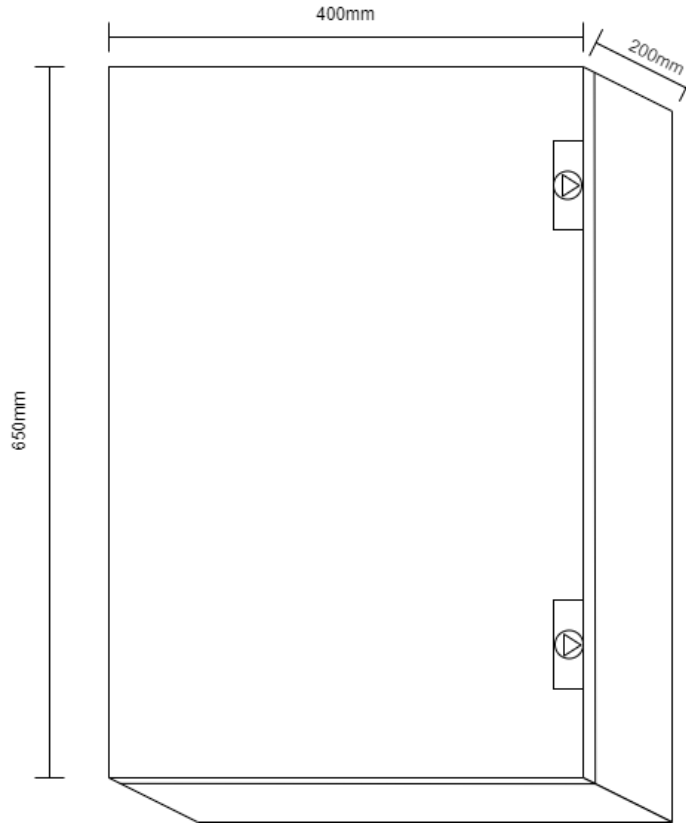

2.3 Terminal Layouts

The terminal layouts are in 2 parts, there are terminals available inside the panel and ports available on the exterior of the panel on the right-hand side.

2.3.1 Internal Terminals


These are for wiring in Power, Digital Inputs, Digital Outputs, and PT100 Temperature Probe inputs. Table 2 below highlights the various terminal numbers and their denominations in the EMS Panel.

TABLE 2: TERMINAL LAYOUT

| Terminal Number | Power | Digital Inputs | Digital Outputs | Temperature Inputs |
|-----------------|---------|----------------|-----------------|--------------------|
| 1 | Earth | DI 1 | DO 1 | Temp 1A (Red) |
| 2 | Neutral | GND | GND | Temp 1B (White) |
| 3 | Live | DI 2 | DO 2 | Temp 1B (White) |
| 4 | | GND | GND | Temp 2A (Red) |
| 5 | | DI 3 | DO 3 | Temp 2B (White) |
| 6 | | GND | GND | Temp 2B (White) |

| | | | | |
|----|--|-------------|-------------|-----------------|
| 7 | | DI 4 | DO 4 | Temp 3A (Red) |
| 8 | | GND | GND | Temp 3B (White) |
| 9 | | DI 5 | | Temp 3B (White) |
| 10 | | GND | | Temp 4A (Red) |
| 11 | | DI 6 | | Temp 4B (White) |
| 12 | | GND | | Temp 4B (White) |
| 13 | | DI 7 | | |
| 14 | | GND | | |

Figure 3: Terminal layout

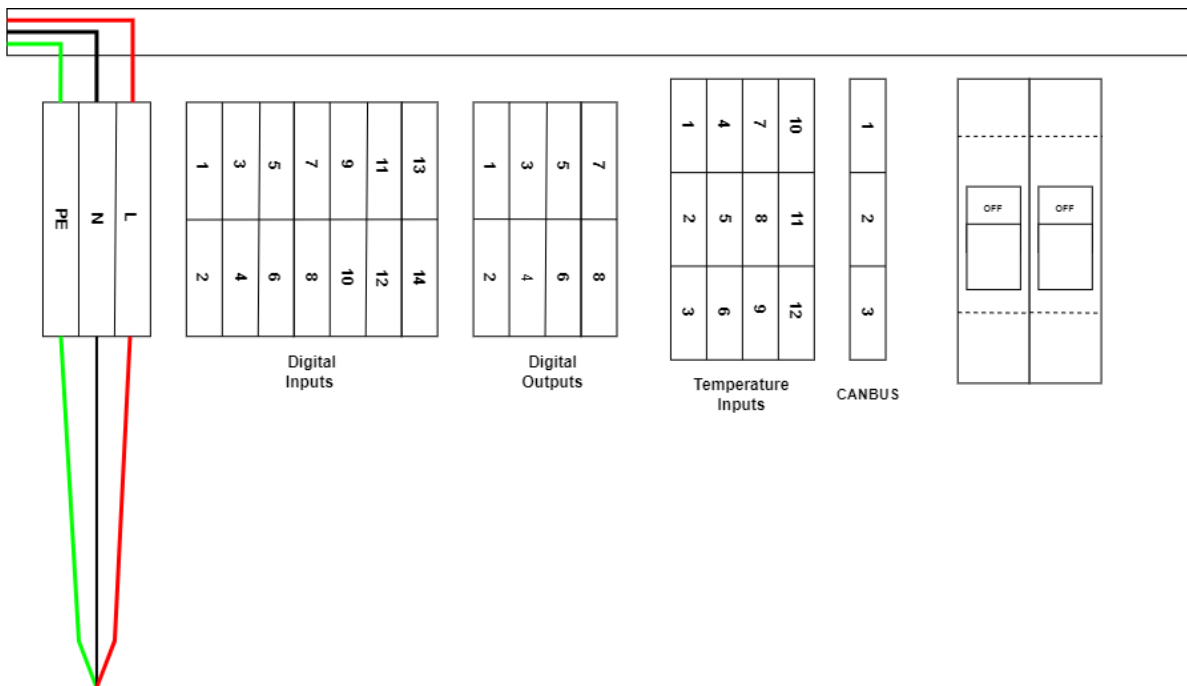


2.3.1.1 Power Input

The system requires 230V AC power. There are three connections for the power: Earth, Neutral and Live

2.3.1.2 Digital Inputs

The digital inputs can be found in the 2nd bank of terminals from the left-hand side in the panel. There are seven inputs in total. The odd pins (1,3,5,7 etc.) are wired directly to the PLC and the even terminals (2,4,6 etc.) are connected to ground. When the appropriate odd and even terminals are connected, it will show "On".


Figure 4: Digital Input layout

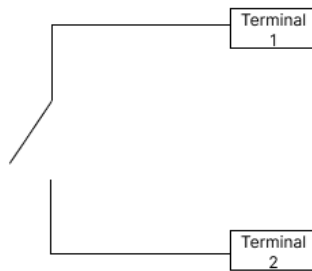

2.3.1.3 Digital Outputs

Digital outputs are found in the 3rd bank of terminals in the EMS Panel. They function as powered outputs. The "Digital Outputs" on the odd terminals (1,3,5 etc.) provide +24V DC when the output is triggered. The even terminals (2,4,6 etc.) are ground terminals to complete the circuit.

Figure 5: digital Output layout

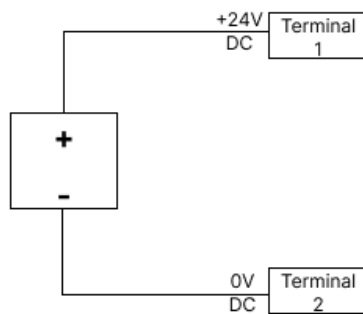

2.3.1.4 Temperature Inputs


The temperature inputs are in the 4th bank of the EMS panels terminals. They are the start of the 3-wire terminals. And their wiring is available for 3-wire PT100 temperature probes only. Follow the colour coding as described in Table 2 to wire in the PT100 temperature probes.

2.3.2 External Ports

The second part is the external ports located on the right-hand side of the EMS Panel. These are used to wire in the communication cables, antenna, Auxiliary power and WAN to the EMS Panel. The auxiliary power from the EMS can be used to power additional devices.


The external ports have different layouts as shown in the figure below. The main two that need to be addressed are the COM ports, which are the RS-485 ports and the EXT Power port.

Figure 6: EMS Panel external ports

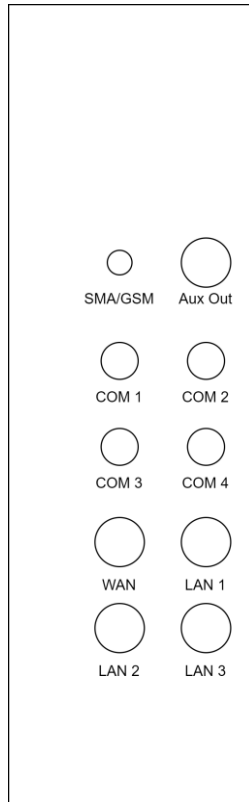

The RS-485 port has its pins denoted as per the image below. This port is viewed directly at the panel itself. Meaning the left most pin in the port is the A+ port, the Right most pin on the port is the B- port and the bottommost pin on the port is the Ground port (GND)

Figure 7: RS-485 Pinout

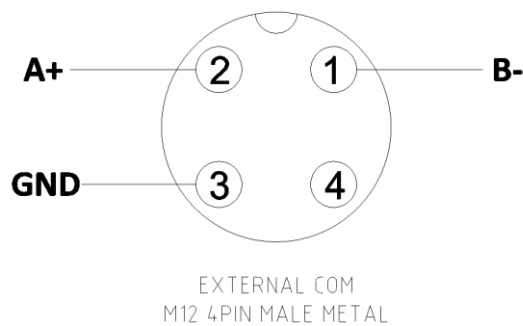


Finally, the External or Auxiliary power port is used to power external 12V and 24V DC devices from the panel's internal power supply. This is achieved using 2 12V batteries located in the EMS panel.

This pin layout is as follows, also looking directly at the port.

TABLE 4: AUXILIARY POWER PINOUT DENOTATIONS

| Terminal: | Denotation: |
|-----------|-----------------------------------|
| E | Earth |
| 24V | 24V DC Supply (1A output, 24watt) |
| 12V | 12V DC Supply (2A output, 24watt) |
| G | Common Ground |

Figure 8: Auxiliary power pinout

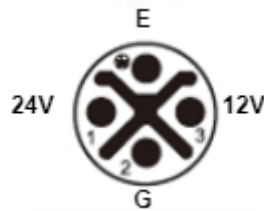

2.4 Installation Steps

This section will guide you through a step-by-step process for fitting and installing the EMS Panel. It will be broken down into sub tasks.

2.4.1 Site Inspection

A site inspection will need to be conducted to determine the appropriate location to install the EMS Panel. Inspect the site to see where it would be appropriate to install the EMS Panel. It is advisable to minimise the RS-485 and Modbus TCP Cable runs.

If there is no option but to run cables near high power lines, the following steps must be adhered to:


- Use shielded cables.
- Run the cables at a minimum of 100mm away from the high-power lines when running in parallel.
- It is acceptable to run the communications cables perpendicular to the high-power lines.

2.4.2 Mounting the EMS Panel

After the panel's position has been determined, proceed to mount the EMS Panel.

The panel has four wall mounting brackets to attach to a wall. These brackets will need to be screwed onto the back of the panel before mounting it to the wall. It would be preferable to use bolts or screws of at least 5mm diameter. As the panel does have a sizable mass.

Figure 9: Panel mounting holes

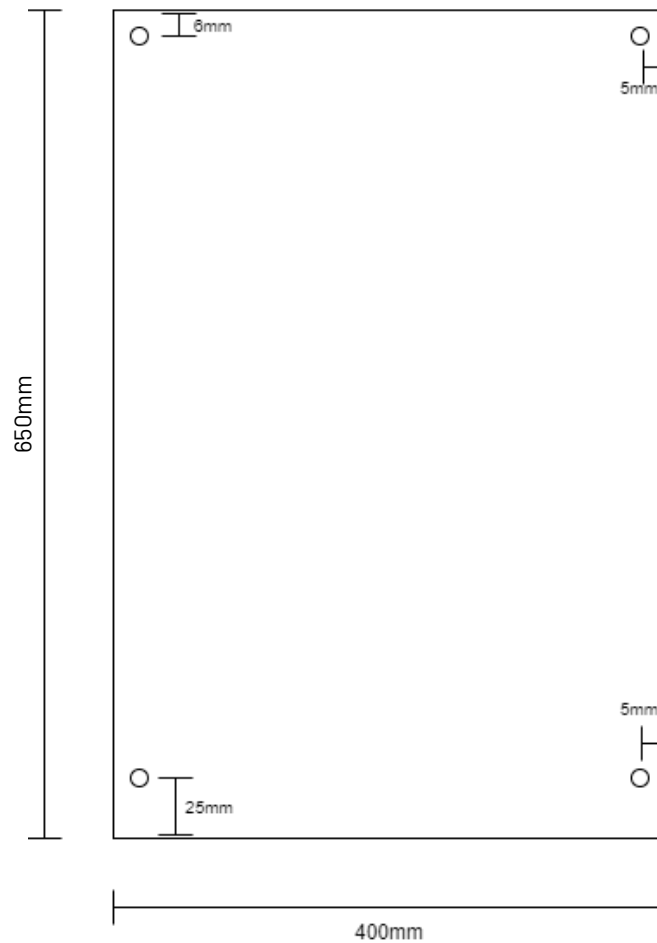

2.4.3 Connecting Power to the EMS Panel

The EMS Panel takes **230V AC** to power the system.

Before connecting the EMS Panel to power, ensure that all breakers in the panel are in the down position and that power is disconnected from the working area.

The EMS panel is powered by a permanent source such as a Distribution Board (DB). This DB board should be on AC output load of the inverter being monitored. This assists in keeping the EMS panel powered as consistently as possible.


Install the 6A circuit breaker in the DB board and run the 1mm² cable from this breaker to the EMS panel terminal inputs.

- There are 3 terminals for input power in the bottom left of the EMS Panel, namely PE, N and L. The layout of these terminals is as follows:

TABLE 5: POWER TERMINALS

| Terminal Name | Function |
|---------------|----------|
| PE | Earth |
| N | Neutral |
| L | Live |

Figure 10: Power terminal position

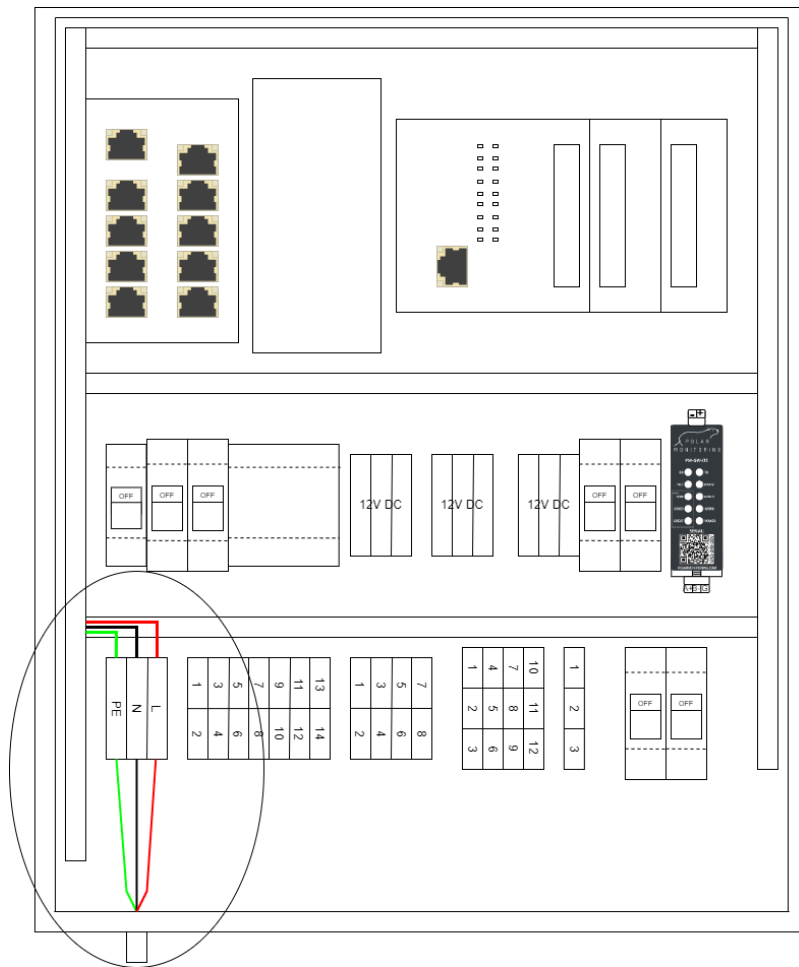


2.4.4 Connecting Communication Cables

Special care needs to be taken when connecting the communications cables to ensure the correct pins are used and that the cable runs are in the appropriate place.

When planning the cable runs, ensure that they are not near any high-power lines. If there is no other option, then adhere to the following guidelines:

- Use shielded cable.
- Run the cables at a minimum of 100mm away from the high-power lines when running in parallel.
- It is acceptable to run the communications cables perpendicular to the high-power lines.

Figure 11: Cable run example

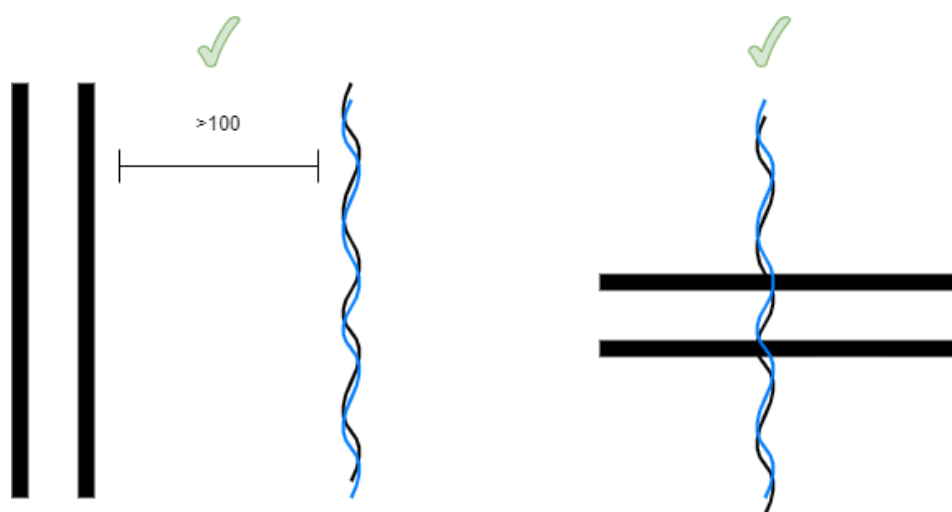

2.4.4.1 RS-485 connections

For the RS-485 Connections it is advised to use a Belden Shielded twisted pair or a similar cable. A suitable alternative is a CAT6 Ethernet cable.

For the pairing of the Modbus A+ and B- it is then imperative that you use a specific twisted pair in the CAT6 ethernet cable, for example, Orange and Orange/white and to not cross or mix colours.

The connection for the RS-485 points can be found on the right-hand side of the EMS panel. The ports are denoted by COM Port 1-4. These ports require an M12 male connector jack to plug the Modbus cable into the side of the unit. Four of these connector jacks are included in the EMS package.

When connecting to the various Modbus RS-485 enabled controllers it is important to note the sign and type of pins on the device. Ensure that one wires the EMS **A+** and **B-** of each Comm Port to the appropriate A+ and B- of the controller being connected.

Note: Some controllers denote their Comm Ports as **A-** and **B+** in this case follow the sign denotation of the **+** and **-** rather than the **A** and **B** notation.


Finally, ensure that the steps below for setting the appropriate serial communication settings are done on the controller being connected.

2.4.4.2 Modbus TCP Connections

For Modbus TCP Connections CAT6 Ethernet cable must be used. Standard Ethernet with the standard RJ45 LAN pinout will be used on either end of the cable.

Connect the various Modbus TCP controllers on the site to the EMS Panel using the ports denoted by LAN 1-3 on the right-hand side of the panel.

Figure 12: RJ45 pinout

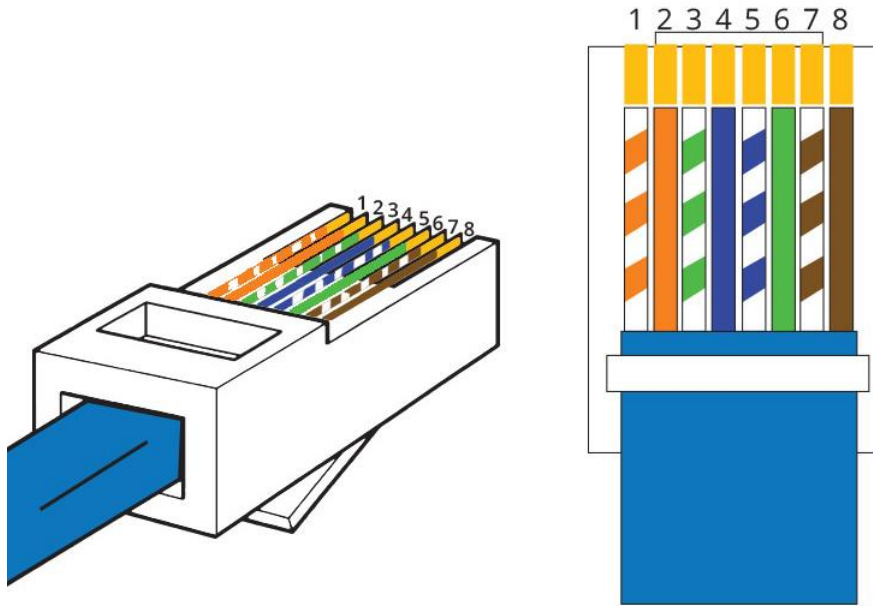

2.4.5 Configuring 3rd party controllers

Each controller connected to the EMS panel needs to have its communication protocols set correctly for the EMS system to communicate with them successfully. It is imperative that the communication settings on the controllers, sensors and any systems connected to the EMS Panel are setup exactly as described below to have a successful connection.

The EMS Panel uses static IP's and preconfigured Modbus TCP and RS-485 settings to streamline the installation and commissioning process.

[MPS Inverter Wiki](#)

[Atess EMS Installation Wiki](#)

[SUNGROW EMS Install Wiki](#)

Note: Ensure there is stable internet connectivity on site as some devices/inverters etc require a mobile App to change these settings, and those App's will require internet to function.

2.4.5.1 RS-485 Based controllers

For the RS-485 controllers you will need to wire the controllers to the connectors that are supplied with the panel, these get connected to the side of the panel into the COM ports that are labelled 1 through to 4. To change the communication settings, you will need to go into the menu/settings on the physical controller, either on its keypad or its appropriate software or connection.

The following settings need to be set for the communications to work with the EMS system.

TABLE 6: MODBUS RS-485 NETWORK CONFIGURATIONS

| Description | Set |
|-----------------|--|
| Modbus Slave ID | Unique per controller on the Modbus Network. Take note of what ID the controller was set to as this will be required when setting up the Cloud Portal |
| Baud Rate: | 9600pbs |
| Data bits: | 8 |
| Parity: | None |
| Stop Bits: | 1 |
| Modbus Type | Modbus RTU |

2.4.5.2 Modbus TCP Based Controllers

For the Modbus TCP controllers the communication settings will need to be changed on the controller/device individually. You will need to go into the menu/settings on the physical controller/device, either on its keypad or its appropriate software and change the communication settings appropriately.

Special care needs to be taken when configuring the Modbus TCP network. The IP addresses must be unique per device. The IP addresses must be set identically on the Cloud Portal during configuration as they are set on site.

TABLE 7: MODBUS TCP NETWORK CONFIGURATIONS

| | |
|------------------------|--|
| Modbus Slave ID | Unique per controller on the Modbus Network. Take note of what ID the controller was set to as this will be required when setting up the Cloud Portal |
| IP Address | 192.168.35.XXX - (Unique to the device being connected) |
| Subnet Mark | 255.255.255.0 |
| Default Gateway | 192.168.35.1 |

2.4.6 Connecting Internet to the EMS Panel

Internet needs to be provided to the EMS panel from a source on the site. This is to ensure that the system can send its data to the cloud and that it can be accessed remotely.

To do this simply run an Ethernet cable to the WAN Port on the right of the EMS panel.

The EMS Panel internet (WAN) input is set to DHCP so as long as there is an internet connection available it will assign itself an appropriate IP address and connect.

Note: The system will still run locally if the Internet connection fails for any reason. The data will be stored on the Glacier Edge directly and once a connection is reestablished it will upload its data and synchronise with the Cloud again. All logic and running of the site software will continue to run uninterrupted.

2.4.7 Connecting the GSM Antenna

The EMS Panel comes with a built in SIM card and GSM connectivity for Freedom Won Remote support. This connection will not upload or grant access to clients. It is used solely to provide

Freedom Won with remote access to the site and the EMS panel during emergencies. Therefore this service can only be accessed by contacting the Freedom Won support team directly.

For this emergency service to function the GSM Antenna will need to be installed correctly to enable the Glacier Gateway to connect to the available cellular networks.

To get the best signal, the antenna needs to be positioned in an open area as high up as possible. Its base is magnetic, and it can be placed on top of the panel itself.

Best practice is to ensure that the antenna is placed outside when possible.

Do not run the antenna cable or place the antenna itself near any high-power cables or transformers as this will disrupt the signal strength.

2.4.8 Connecting the backup batteries


Once all the connections have been run and the site is ready to power up then it's time to connect the backup batteries.

In the EMS Panel there will be 2 sets of battery terminal connectors coming out the trunking on the right-hand side. These terminals are colour coded. Red Cable – Positive, Black Cable – Negative.

Place the batteries end to end in the panel and connect the red cables to each of the two positive terminals and the black cables to each of the negative terminals. So that the batteries are wired in parallel.

The EMS panel has a combined 15Ah of backup battery capacity which will run the EMS Panel and system without external power for 24hours.

Figure 13: connecting backup batteries

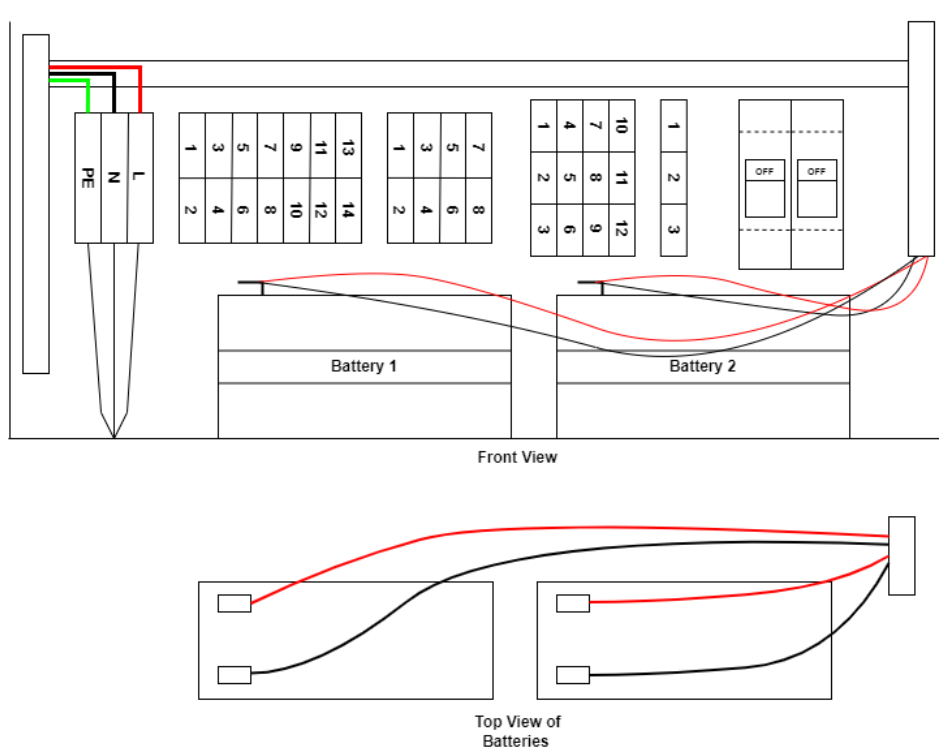

3. Getting Started

3.1 Power ON

Now that the system has been successfully installed based on the procedure above and the site is ready to receive power we can power on the system.

To do this, you need to follow this procedure:

1. Switch on the 6A breaker in the DB board,
2. Switch on the 6A breaker in the EMS Panel
 - 2.1 If there is power on the site, the systems lights should come on
 - 2.2 If there is no power on the site proceed to the next step to run the EMS Panel on its backup batteries.
3. Switch on the two 6A breakers for the batteries
 - 3.1 If there is no mains power the system will now power on and run off its backup batteries.
 - 3.2 If there is power from mains in 2.1 then the system will begin to charge the batteries.

3.2 Lights on the EMS Panel

There are two lights on the front face of the EMS Panel, they are denoted "Power" and "Error"

The power light indicates that there is AC or battery power coming into the EMS Panel.

The Error light indicates that there is an Error on the EMS system.

3.3 Commissioning of Devices

Commissioning of the site means adding the various devices installed on site to the Cloud Portal. In this step we will take the Modbus RS-485 settings and the TCP settings established in section 2.4.5 and setup the controllers/devices on the Cloud with the same settings.

These devices will be commissioned online through the Polar Cloud. Follow the link below to add and setup an account and begin adding devices.

For assistance on these units please contact Freedom Won support for the 1st time setup procedure.

[Click here](#) for basic instructions on how to use the Cloud Platform.

Note: An internet connection is required to finalise and test the setup of the EMS Panel.

Each Polar Monitoring Glacier Edge EMS Panel has a unique serial number. Use this serial number to begin the setup procedure under the Gateways tab on the Cloud.

4. Troubleshooting

4.1 Power switch not working.

If the power light does not illuminate, it means that the EMS Panel is not getting power. This light will only illuminate if there is 230V AC power to the system.

Ensure that the DB supplying the EMS panel is on the output of the inverter and that the inverter is powered on and giving out 230V AC supply from each phase to neutral.

4.2 Error light staying illuminated.

The Error light illuminating on the front of the panel is an indication of one of two things

Option 1: The first is that there is no internet connection present to the EMS panel.

In this case check the internet connection on the site to ensure it is up. Alternatively check the Ethernet cable that is providing the internet connection to the EMS Panel to make sure there is no damage to the cable and that it is secure in the switch.

If there is internet connection to the panel and the ethernet cable is working in order, then there could be firewall issue on the network preventing the EMS Panel for gaining an internet connection. Contact your IT administrator to open the firewall for the EMS Panel.

Option 2: The second is if there are any communication failures between the EMS Panel and the controllers/devices connected to it. This means that there is a device/controller setup on the Cloud that is not sending its info back to the EMS Panel.

Firstly identify which controller/device is having the issue by looking at the data on the Cloud and seeing which one is not sending its data through. Once identified,

1. Check all the communications cables going to this device/ controller
2. Double check the Comms settings to ensure that they are set correctly.
3. Ensure that the same Modbus Slave ID that is set on the Controller/ device is the same as the one set on the cloud.

4.3 Not getting communication to a controller on the site

Communication failures between the EMS Panel and the controllers, devices connected can have a number of causes. This will manifest itself as a controller/device setup on the Cloud is not sending any data upstream.

Firstly, identify which controller/device is having the issue by looking at the data on the Cloud and seeing which one is not sending its data through. Once isolated,

1. Check all the communication cables going into the device/ controller. Search for any signs of damage, where they are plugged into the terminals, etc. Double check the Com Settings to ensure that they are set correctly.
2. Ensure that the same Modbus Slave ID that is set on the Controller/ device is the same as the one set on the cloud.

5. Upgrades

Upgrades to the system happen on a constant basis via the Cloud. There will be new software versions for updating on the physical Glacier Edge gateways in the EMS panels that can be downloaded.

The Cloud Portal will ever be evolving and automatically updating to bring you the best service possible, keep an eye on our Change Log here to view the latest changes and updates to the system as they get published.

Upgrades to the system, we can talk about additional upgrade panels.

6. Maintenance

The maintenance on the EMS panel is basic. Keep the panel clean and free from water ingress and the system will function for many years to come.

The Freedom Won batteries if cycled regularly will need to be changed every 5 years to ensure perfect redundancy on the power backup for the EMS Panel.

Do visual inspections of the EMS Panel and Cables at least once a year to ensure that there is no damage and that all connections are still secure.

6.1 Help and Support

For help and support please contact Freedom Won’s technical team.

1. Go to www.freedomwon.co.za
2. Click the “Contact” tab
3. At the bottom left of the page, follow Support Enquiries and Request Technical Support
4. Click on “New support ticket” to open a new support ticket, as shown in the image below

The screenshot shows the support portal interface. On the left, there is a 'Login to the support portal' section with input fields for 'Your e-mail address' and 'Password', a 'Remember me on this computer' checkbox, a 'Forgot your password?' link, and a green 'LOGIN' button. Below this is a link for agents: 'Are you an agent? Login here'. At the bottom left, there is a link to 'Submit a new ticket' and a button labeled 'NEW SUPPORT TICKET' which is highlighted with a red rectangular box. In the center, there is a section for logging in with Google. On the right, there is a 'Sign up' section with a 'SIGN UP WITH US' button and a paragraph explaining the benefits of signing up.

Details:

The screenshot shows the 'Submit a ticket' form. The 'Support Type' dropdown menu is open, showing 'Technical Support' as the selected option, with 'Sales Support' also visible. A callout box on the right side of the form contains the text: 'Choose Technical Support from the drop-down menu that appears.' The form includes fields for 'Requester Email', 'Topic / Subject', 'Battery model number', 'Battery serial number (FWxxxx-xxxxx)', 'Quantity Installed', and 'Supplier Purchase details'.

Submit a ticket

Support Type: *

Service Type: *

Requester Email: *

Topic / Subject:

Battery model number: *

Battery serial number (FWxxx-xxxx): *

Quantity Installed:

Supplier Purchase details: *

Installer details: *

Complete all the required fields on the support form and click "Submit" to submit the form.

Installer details: *

Site location details: *

Inverter used: *

Electrical Installation type:

Remote connection available to inverter and or battery pack:

Provide User Access to related Inverter Portal (Link and username if available): *

Access to battery programming cables: *

Description of the problem experienced (Attach Images of Installation) *

Alternatively, contact the Freedom Won Technical support team on enquiries@freedomwon.co.za and +27 10 597 7794.